



# STT-2024-4

## Motion Pro Injector Cleaner


---

**Confidentiality Notice:** This message (including attachments) contains information that may be confidential and is for authorized Beta Dealer's use only

***If you have a 4-stroke unit that cranks over but will not start, and you have verified that you have fuel pressure, spark and compression, you may have a clogged fuel injector. This condition may be present on a new or in service unit that has been sitting for some time. The Motion Pro fuel injector cleaner (PN: 08-0594) is an excellent option for cleaning clogged fuel injectors.***


***Note: Please follow the included instructions in the injector cleaner kit to set up and use the tool properly.***

1. Remove the fuel tank and seat to access the primary fuel injector.
2. Remove the 4mm Allen screw that retains the injector in the throttle body.

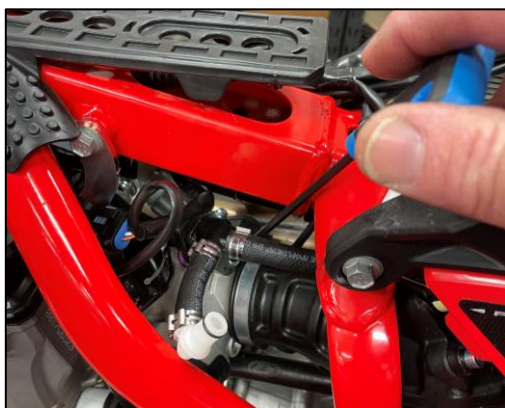

3. Remove the retaining clip to release the injector from the fuel line.

4. Insert the spray nozzle end into the cleaner body to back flush the injector if enough fuel has gelled in the injector body, you may have to cycle the injector cleaner power button multiple times to clear the injector.

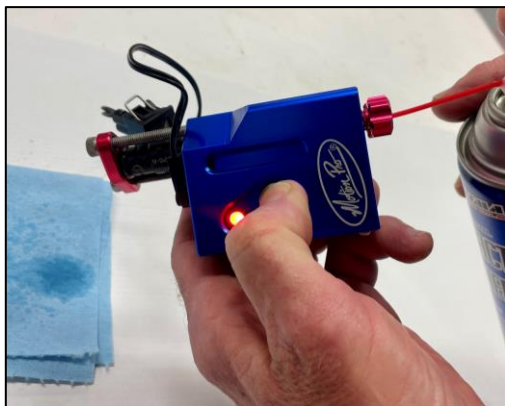

5. Back flush the injector into a clean towel. Inspect for any debris from injector.

6. Swap the injector to insert the inlet end into the cleaner body.

7. Clean the injector. Note the spray pattern.



8. Reinstall the injector into the fuel line and throttle body.