



GreaseRite Swingarm And Bearing Greasing Tools

Part# AB-80085 & AB-80086

Fits: All Beta Trials Bikes

Installation Instructions:



1. Remove Components: Carefully remove the linkage and/or swingarm from your motorcycle
2. Clean Components: Thoroughly clean any dirt and debris from the removed components
3. Remove Bushings: Remove suspension bushings by hand or gently using a screwdriver if necessary. Note: Use the GreaseRite tool to push the bushing out. This prevents the needles from dislodging

4. Insert GreaseRite tool (see image 2)

5. Attach Grease Gun: Any standard grease gun is acceptable (Grease gun not included in purchase) (see image 3)

6. Apply Grease: Hold GreaseRite tool firmly up against component and gently squeeze grease gun until old grease is evacuated from the bearing and fresh, clean grease emerge

7. Clean Excess Grease: Wipe away any old or excess grease from exterior before removing the tool. This prevents dirty grease from being pulled back into the freshly lubricated bearing

8. Remove GreaseRite tool: Carefully remove the GreaseRite tool and inspect the bearing to ensure uniform and clean grease application

9. Reinstall bushings: Reinstall the bushings into their original positions

10. Reinstall Components: Reattach the linkage and/or swingarm to your motorcycle, ensuring all parts are properly aligned and fastened

