





# Voyager Kit 2020+ RR/XT

Part# AB-21998

2020+ XT, 2 Stroke Standard, & Race Editions

## Installation Instructions:

1. Unplug all plugs going to the speedometer and speedometer bracket.
2. Remove the wiring plugs from the bracket. Remove the speedometer and bracket from the triple clamp.
3. Remove the nut from the speedometer bracket using pliers. Install the nut in the new bracket in the same location.
4. Install the 2 rubber grommets, 3 hole plugs, low fuel and system warning indicator lenses in the new bracket. Use an O-ring and circlip to secure the indicator in the bracket.  
\*Race editions and bikes with oil injection removed can use 5 blank plugs and no warning indicators.
5. Use the 4 spacers and 2 Phillips screws to mount the voyager to the bracket.

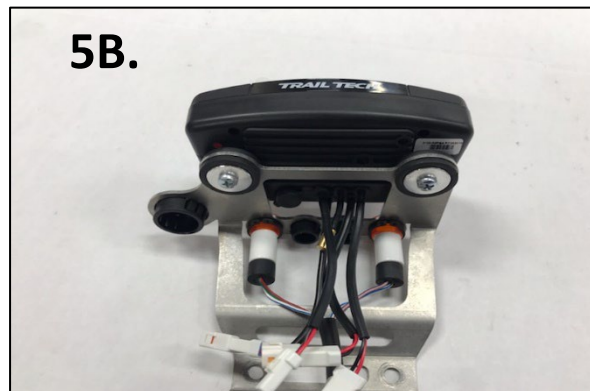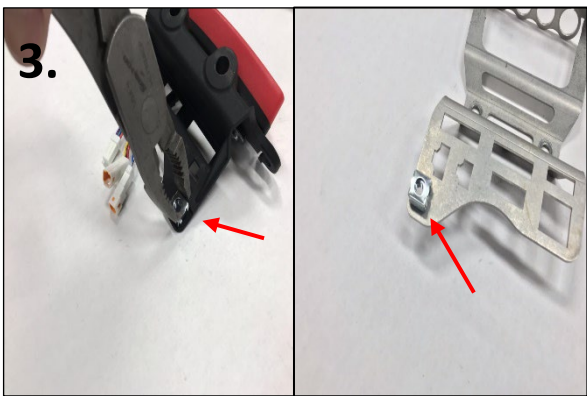




# Voyager Kit 2020+ RR/XT

Part# AB-219978

2020+ XT, 2 Stroke Standard, & Race Editions

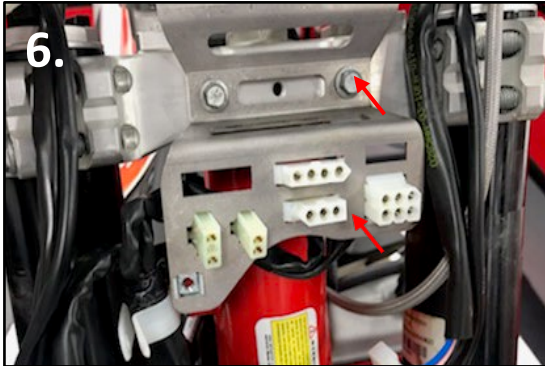


6. Insert the wiring plugs into the new bracket. Attach the bracket assembly to the triple clamp using the 2 supplied 6x12 bolts.


7. Remove seat and fuel tank.

8. Drain coolant by removing the water pump cover drain bolt or lower right water pump cover bolt on the 4 stroke.

Loosen the radiator cap to start the flow into a container.

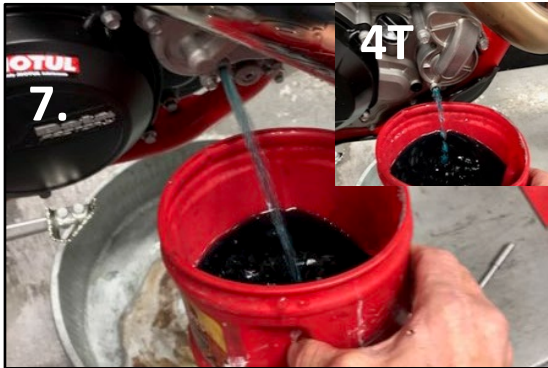

6. Remove the left radiator bolts and loosen the hose clamps on the straight radiator cross over hose (9A). Remove the hose and cut it in half making the cut in the middle of the hose. Cut lower LH hose on 4 stroke models (9C). Attach the temperature sensor "T" using the 2 supplied hose clamps (9B). Re install the radiator hose and tighten the clamps. Re install the radiator bolts and tighten. Refill with coolant

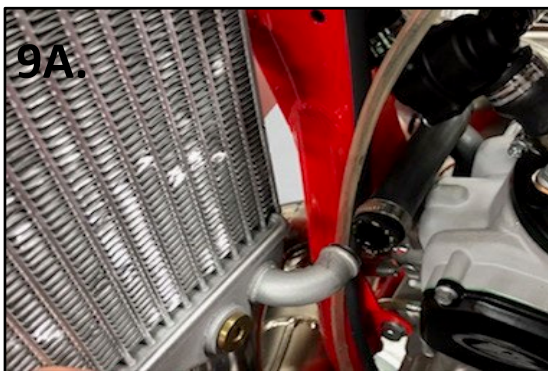





# Voyager Pro Kit 2020+ RR

Part# AB-21998

2020+ XT, 2 Stroke Standard, & Race Editions




10. Install the tach sensor lead on the spark plug cap using the 2 supplied small zip ties.

\*The lead can be shortened.


Run the tach sensor lead and temperature sensor lead up to the voyager and plug them in.



11. Connect the 4 pin plug from the warning indicator lights to the 4 pin plug of the main harness.

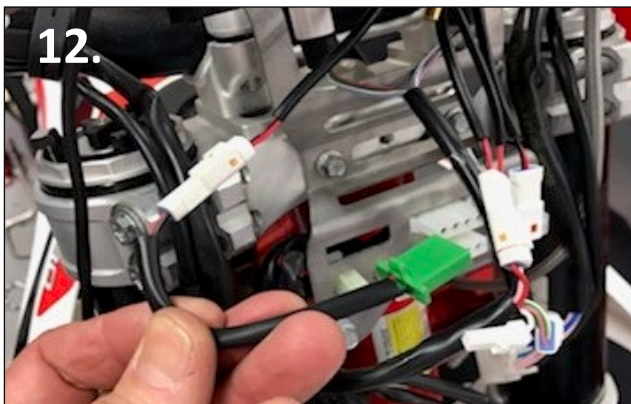

12. Connect the small plug from the speedometer adaptor to the voyager.

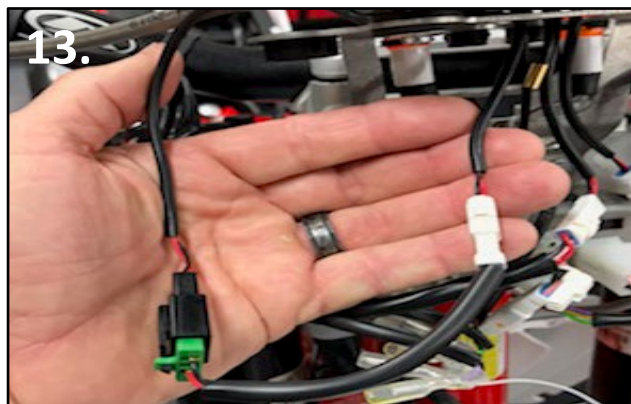

13. Connect the large plug from the speedometer adaptor to the speedometer sensor plug.




# Voyager Kit 2020+ RR/XT

Part# AB-21998

2020+ XT, 2 Stroke Standard, & Race Editions



14. Find the flasher wires and carefully cut a slit in the outer jacket at a point in the middle of the harness(14A). Using pliers, install the red wire tap on to the red flasher wire (14B). *The wire is white on a 4 stroke.* Plug the male red connector from the indicator light harness on the red wire tap (14C).

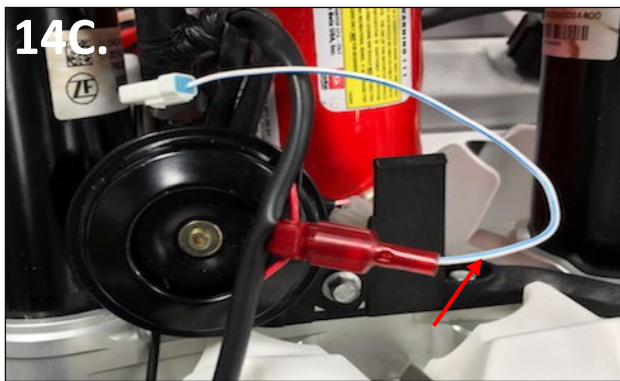

15. Secure the harness clamp to the bracket.






# Voyager Kit 2020+ RR/XT

Part# AB-21998

2020+ XT, 2 Stroke Standard, & Race Editions

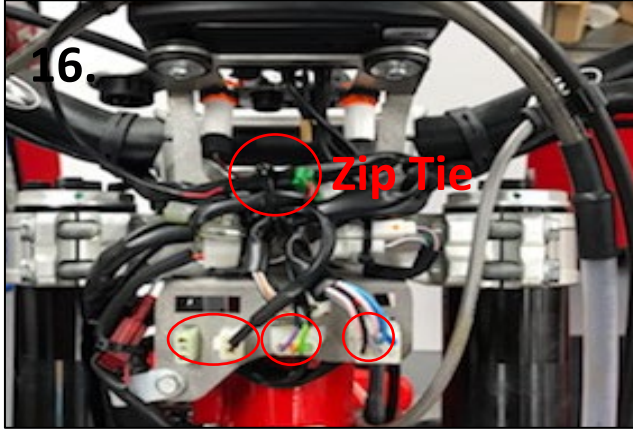

16. Plug in all remaining plugs then secure the wires with supplied zip ties.

Re install the fuel tank and seat.



17. Your Voyager is now ready for use.