



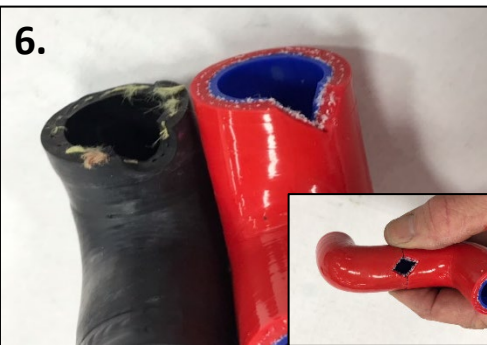

Samco Radiator Hose Install

Part# AB-22142

Fits: 2020 4 Stroke RR/RRS

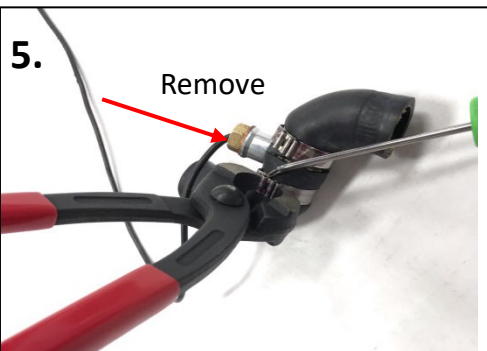

1. Remove the seat and fuel tank
2. Remove the lower water pump cover bolt and washer, then drain coolant.
3. Loosen the radiator cap to begin the coolant flow into a clean container for re use.
4. Loosen all the hose clamps attached to the radiators and cylinder head. Remove the two radiator louvers and radiators from bike.
5. Remove all the lower radiator hoses. Remove the self locking hose clamps from the lower left hose by squeezing the clamps with pliers and prying apart the two sides. Remove Temperature sensor T from the hoses.
6. Cut the lower left radiator hose in half to match the OEM hose, then cut a small V in the side of each hose to match the OEM hose. Insert the Temp Sensor "T" in the new hoses and secure with hose clamps.
7. Remove the self locking hose clamp from the bottom of the upper hose at the thermostat by squeezing it together then prying the 2 pieces apart.
8. Pull the upper hose out through one of the upper hose holes in the frame
9. Install the new T hose through one of the holes in the frame and work the lower end down through the frame towards the cylinder head and secure with a hose clamp.
10. Install all the lower hoses with the clamps loosely installed then attach the hoses to the radiator, tighten the radiators to the frame then tighten all remaining clamps.
11. Re attach the louvers and install drain bolts, then refill with coolant.
12. Re install the tank and the seat then you are all set to ride!